



## INSTRUCTIONS

### INSTALLATION

1. Sweep and clean desired surface and remove any objects. Make sure surface is dry before rolling out mat.
2. Unrolling the mat: (See Figure 1)

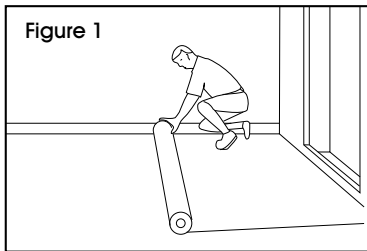

- a. **Option 1:** For best results, unroll in the sunlight on a clean surface. The warmer the conditions, the quicker the curls will straighten out and lay flat. Using a wide push broom, push air out from center and work your way out (side to side and length to length). Repeat if necessary. (See Figure 2) Place mat on desired surface.

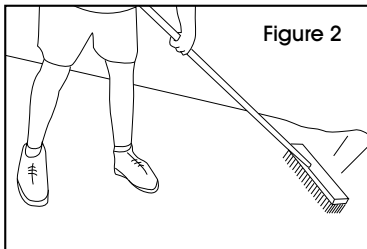


- b. **Option 2:** To unroll directly on desired surface, start unrolling at the entrance, finishing at the back. In cool conditions it may take 72+ hours for most curl marks to lay flat depending on the temperature. Using a wide push broom, push air out from center and work your way out (side to side and length to length). Repeat if necessary. (See Figure 2)





**NOTE:** Initially, the mat will have curl marks due to being rolled on a core. This is normal.

3. Unrolling multiple mats side by side: edges may be butted together or overlapped (1.5" to 6") for seamless appearance and surface protection. (See Figure 3)

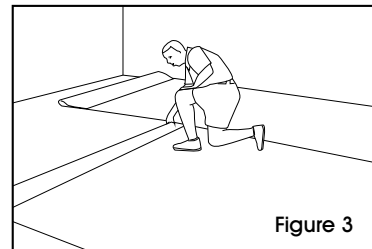




4. **Seaming** – Fold back edges of rolls and wipe clean. (See Figures 4 and 5)

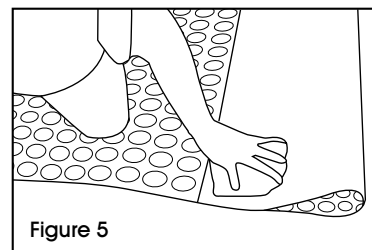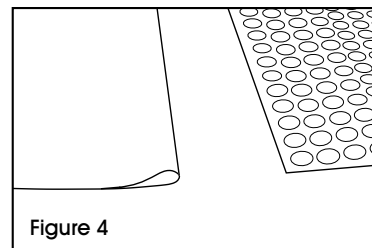


# INSTRUCTIONS CONTINUED

## 4. Seaming continued


- a. **Butt seaming** – Attach 3M 4945VHB Acrylic Foam Tape (S-10130) along roll #1's edge (leaving 2" of tape exposed) and fold back into position. Fold back roll #2 and wipe bottom edge clean. Carefully align along edge of roll #1. Do not stretch mat or tape when applying. (See Figures 6-8)

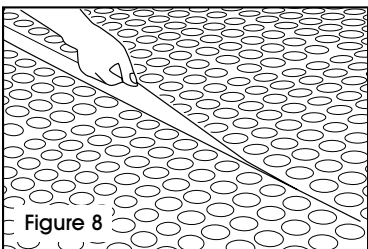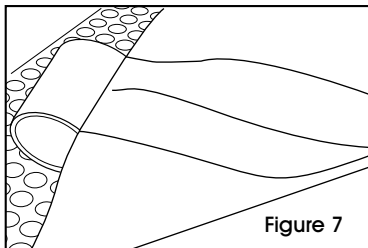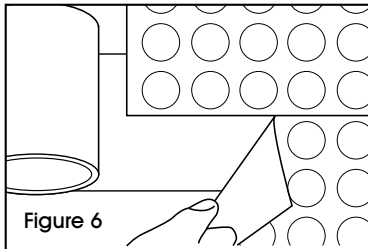


- b. **Overlapping** – Mats that are 10' wide have an overlap flap (approx 1.5" to 2" wide) of unpatterned material running down the side. (See Figure 9)

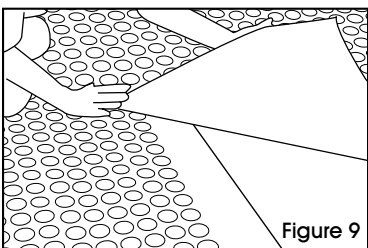


5. For custom fit, allow product to relax in place before trimming around edges and corners. (See Figure 10)

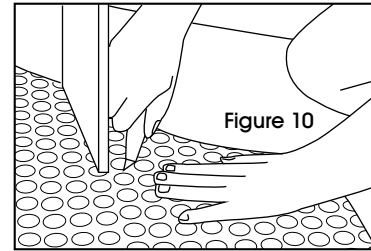



-  **NOTE:** If the mat is used under extreme temperature conditions, such as direct sunlight or unheated rooms, the product may expand or contract as much as 2% after laying flat.


6. Trim edges with sharp scissors or utility knife. Trim edges along exterior walls leaving 1/4" gap to allow for expansion/contraction. (See Figure 11)

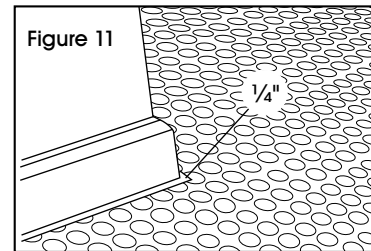

7. Taping or gluing edges or seams (See Figures 12-13)

- a. If you choose to hold down the edges or seams between two mats, use Uline S-15829 3M Rubber & Vinyl 80 after the mat has relaxed.

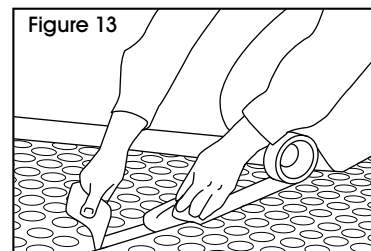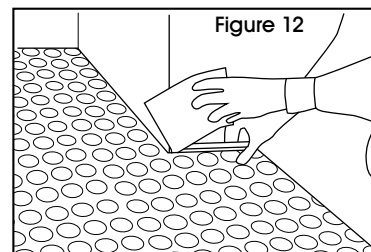

-  **NOTE:** Due to the manufacturing process, patterns of two pieces of flooring may not match or align exactly along the seam when two mats are laid side by side.

## INSTRUCTIONS CONTINUED

### CLEANING:

Surface is easily washed with soap and water. Brush or sweep with cool water using a broom or sponge squeegee. Mild soaps and normal household detergents may be used. Do not leave harsh detergents or chemicals on the mat.

Normal household vinyl cleaners may be used to increase longevity and to remove stubborn debris. Certain automotive vinyl products may cause surface to become slippery. Use a non-slip vinyl protector such as a clean-and-shine floor cleaner.

This is not a stain-proof mat—certain dyes, inks, rubber tires, and chemicals may cause permanent staining. Never use harsh chemicals such as tar remover or kerosene on this product.

After cleaning, apply a coat of floor polish for vinyl floors to add a long-lasting, high-luster finish.



**NOTE:** Leaving chemicals on the product for a long period of time may cause damage. If concrete floor has been treated with certain sealers prior to mat installation, sealer may break down over time and adhere to back of mat without causing damage to mat.



**NOTE:** Some motorcycle kickstands may cut or damage this product.