


# ULINE H-2515 WALL-MOUNTED COAT RACK

1-800-295-5510  
uline.com

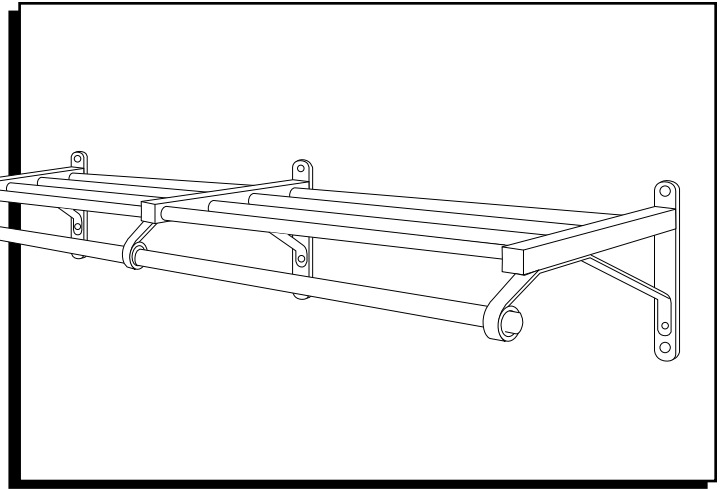


## TOOL NEEDED




## PARTS


### CONTENTS OF H-2515S Starter Box




Back Strip (A) x 2




End Shelf Support (B&C) x 2

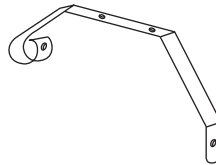

Shelf Support Brace (D) x 2

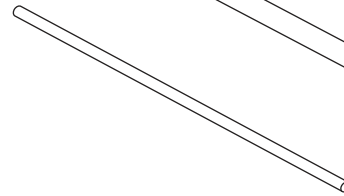

Shelf Tube (E) x 4

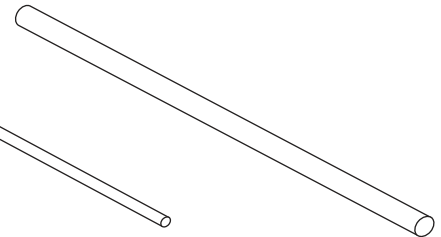

Hanger Bar (F) x 1



1/4 x 3/8" Round Head Screws (G) x 6



1/4 x 1" Flat Head Screws (H) x 2



10-24 x 3/8" Round Head Screws (I) x 2




10 x 2" Round Head Screws (J) x 4




Black End Caps (K) x 2


### CONTENTS OF H-2515A Add-on Box




Back Strip (A) x 1




Center Shelf Support (L) x 1

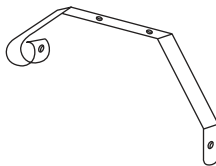

Shelf Support Brace (D) x 1

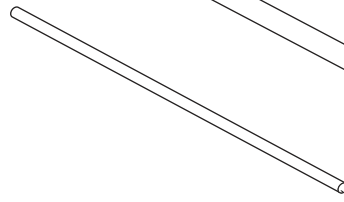

Shelf Tube (M) x 4  
with tapered end

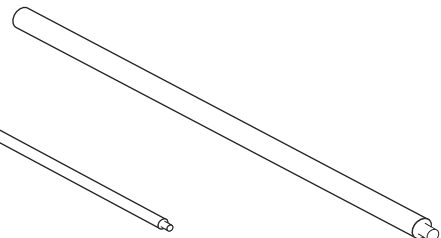

Hanger Bar (N) x 1



1/4 x 3/8" Round Head Screws (G) x 3



1/4 x 1" Flat Head Screws (H) x 1



10-24 x 3/8" Round Head Screws (I) x 1



10 x 2" Round Head Screws (J) x 2


# ASSEMBLY

1. Open both H-2515S and H-2515A boxes and arrange parts on a flat surface as shown in Figure 1.




**NOTE:** The large 3/4" diameter holes face to the right on the left end shelf support and to the left on the right end shelf support.

Figure 1

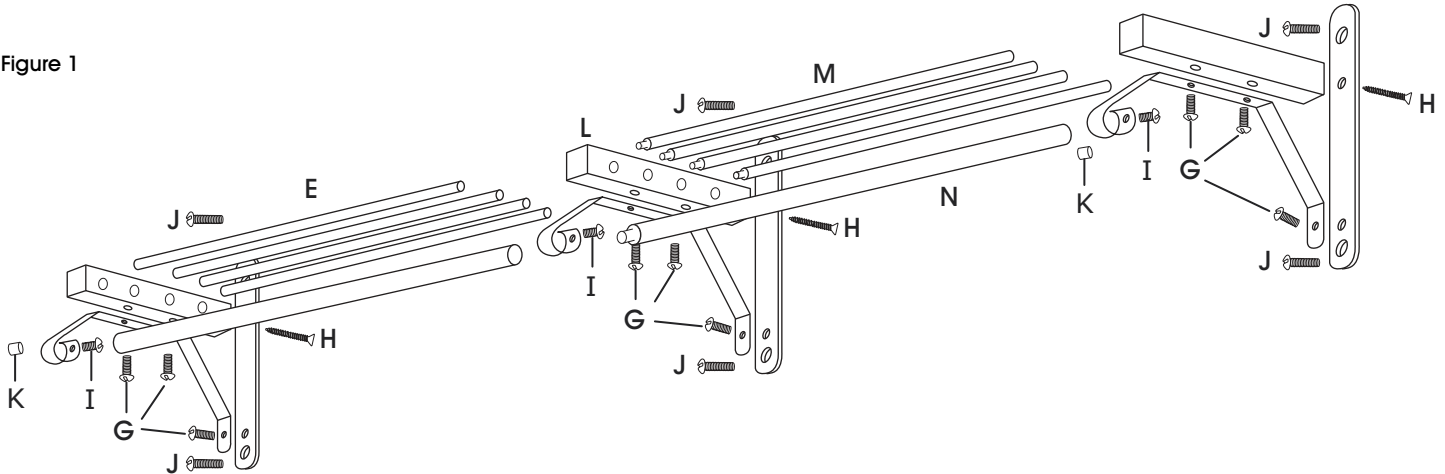


2. Assemble left, center and right brackets as shown in Figures 2-4. Tighten H screws first and then G screws.
3. Mount the left Bracket to the wall using two J screws making sure that the large holes face to the right and that the bracket is level.
4. Insert all E shelf tubes into the holes in the left bracket.
5. Feed the other end of the E shelf tubes through the holes in the center bracket.
6. Position the center bracket so that it is as far right as possible while still supporting the E shelf tubes. Mount the center bracket to the wall using two J screws making sure the bracket is level.
7. Insert the tapered ends of M shelf tubes through the holes in the center bracket and into the ends of the E shelf tubes.
8. Insert the ends of the M shelf tubes into the holes on the right bracket.
9. Mount the right bracket to the wall using two J screws making sure that the bracket is level.
10. Feed F hanger bar through left and center brackets.
11. Feed N hanger bar through the right and center brackets making sure the tapered end fits into the end of the F hanger bar.
12. Center the hanger bar between brackets and tighten into place with the three I screws.
13. Press one K black end cap into each end of the hanger bar.

Figure 2

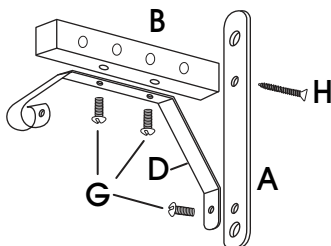


Left Bracket

Figure 3

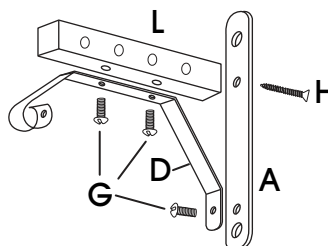

Center Bracket

Figure 4

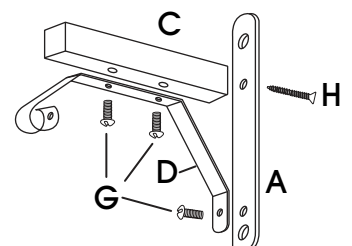

Right Bracket